

How to Set Up Temp./Humidity Sensor

1. Introduction

When a Temp. & Humidity sensor installed, you can let the actual temperature and humidity displayed on LED sign.


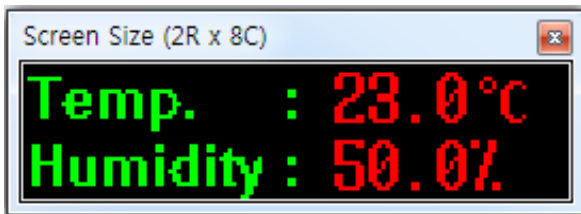


Fig. 2 Display Image of Temp. & Humidity



Fig. 1 Temperature & Humidity Sensor

2. Connection

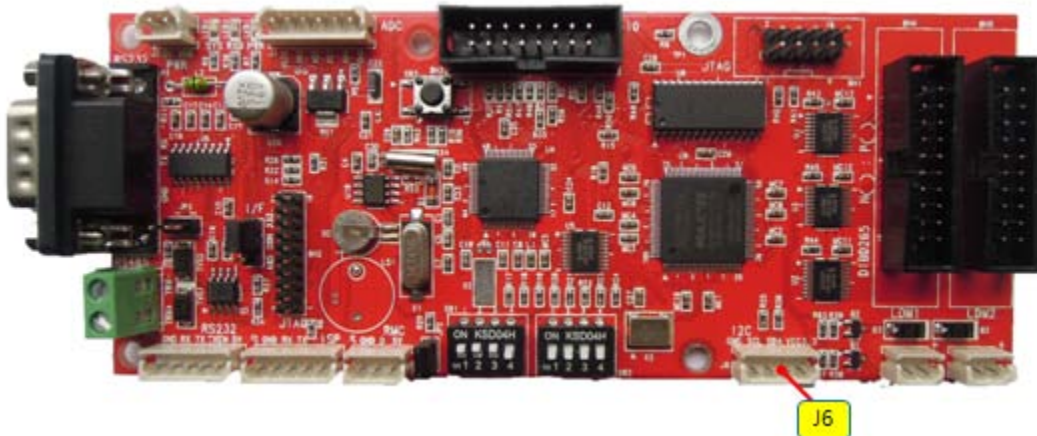

As for DIBD120/160/220/260, the sensor shall be connected to **J6**(or **I2C**) port.
As for DIBD500, the sensor shall be connected to **J10** port.

3. Setting Procedure

Once the sensor installed, see the following chapter of "Software manual" and follow the procedure.

- ☞ 3.6 Calibrating Temperature Sensor
- ☞ 4.4.3 Setting Information Text for Temperature & Humidity